

Canon

EOS REBEL T2i EOS 550D






Quick Reference Guide





This quick reference guide explains the basic function settings and how to shoot and playback images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS REBEL T2i/EOS 550D Instruction Manual.

CT1-1037-000

English
© CANON INC. 2010

     Quick Start Guide

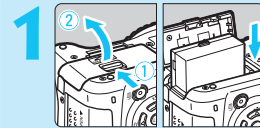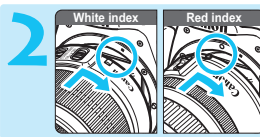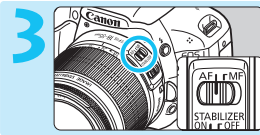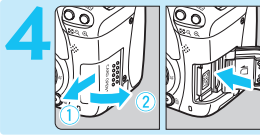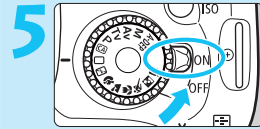
- 1** **Insert the battery.**

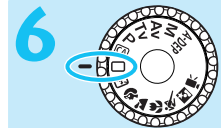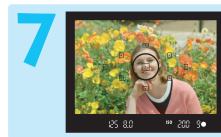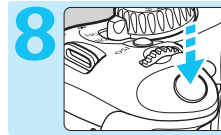   - 2** **Attach the lens.**
Align the lens' white or red index with the camera's index in the matching color.

- 3** **Set the lens focus mode switch to <AF>.**

- 4** **Open the cover and insert a SD card.**

 - 5** **Set the power switch to <ON>.**

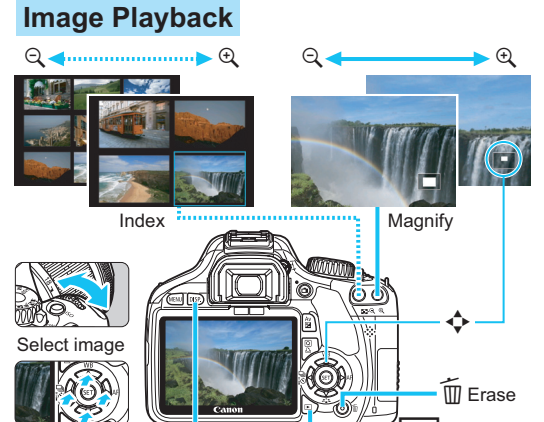
- 6** **Set the Mode Dial to <Q> (Full Auto).**
All the necessary camera settings will be set automatically.

- 7** **Focus the subject.**
Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.

- 8** **Take the picture.**
Press the shutter button completely to take the picture.

- 9** **View the image.**
The captured image will be displayed for approx. 2 sec. on the LCD monitor.



- The ☆ on the right of the function indicates that the function is available only in Creative Zone modes (P, Tv, Av, M, A-DEP).
- Battery Life**

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 550 shots	Approx. 440 shots

Image Playback

 


DISP. Shooting information




Preparation

Menu Operations

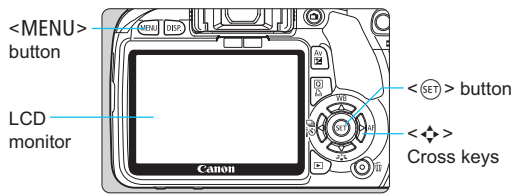


- Press the <MENU> button to display the menu.
- Press the <<> key to select the tab, then press the <▲> key to select the desired item.
- Press <SET> to display the setting.
- After setting the item, press <SET>.


 
Basic Zone Modes



Movie Shooting Mode



 


Creative Zone Modes

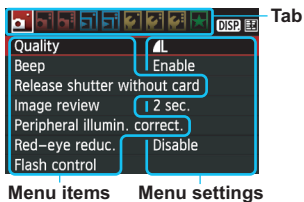  

Menu Settings

 
 
 
Shooting 1/2/3

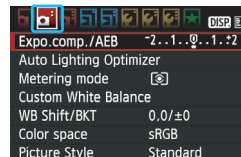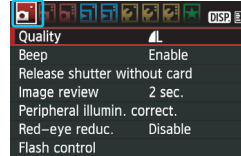

Playback 1/2




   Set-up 1/2/3

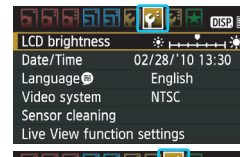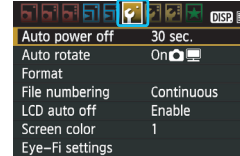

These screens apply when a Creative Zone mode is set. In Basic Zone modes and Movie shooting mode, the tabs and menu options displayed will be different.

 
Movie 1/2

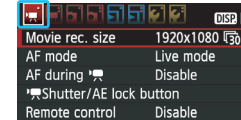

Quick Control Screen



 
- With the shooting settings displayed, press the <Q> button.
- The Quick Control screen will appear.

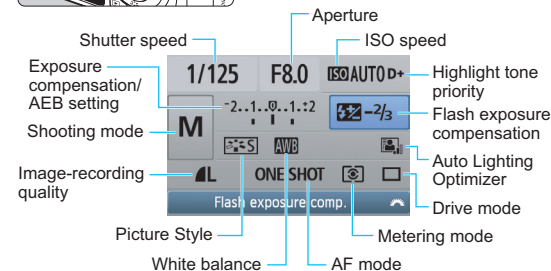


- Press the <<> key to select the function, then turn the <Q> dial to set it.
- In the Basic Zone modes (except CA), you can select certain drive modes and the image-recording quality.

Image-recording Quality

 - Select [Quality], then press <SET>.
- Press the <<> key to select the quality, then press <SET>.

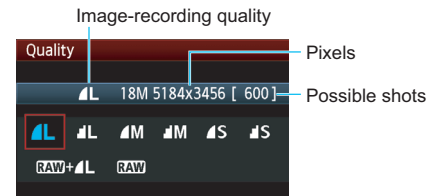

Picture Style ☆

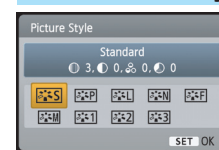 


- Press the <<> button.
- Press the <<> key to select the Picture Style, then press <SET>.

Style	Description
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.


- For <Neutral> (Neutral) and <Faithful> (Faithful), see the camera's instruction manual.

Shooting Operation

 
Nomenclature

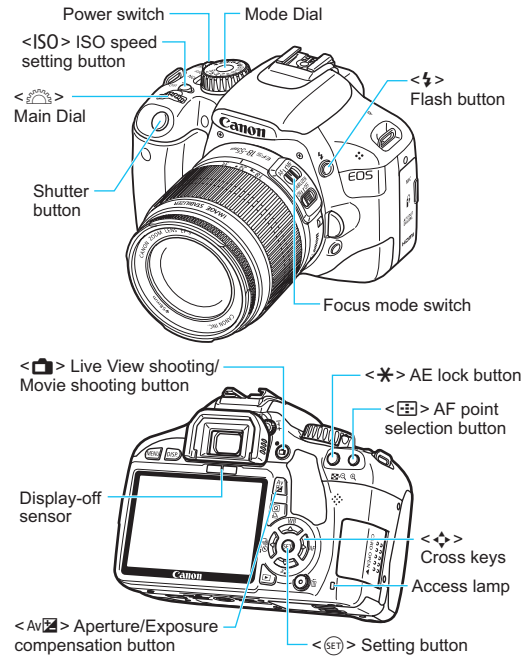


Shooting Settings Display

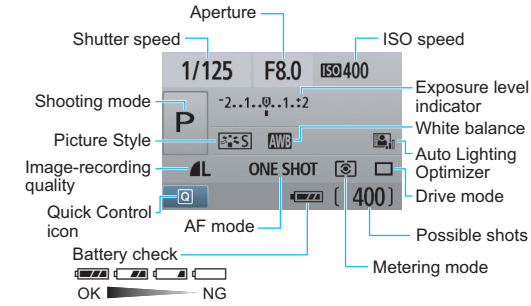 

Viewfinder Information

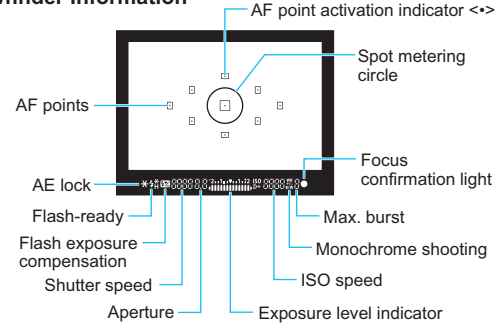 


Basic Zone Modes

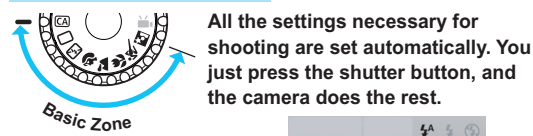 

- Full Auto
- Creative Auto
- Flash Off
- Portrait
- Landscape
- Close-up
- Sports
- Night Portrait

 All the settings necessary for shooting are set automatically. You just press the shutter button, and the camera does the rest.

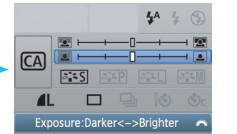


- (Displayed only when <CA> is set.)
- Press the <Q> button, then press the <+> key to select the function.
- Turn the <DIAL> dial to set the function.

Using the Built-in Flash


Basic Zone Modes

If necessary, the built-in flash will pop-up automatically in low-light or backlit conditions (except in the <CA> <LA> <CL> modes).

 Creative Zone Modes

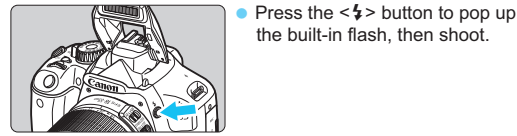

Creative Zone Modes

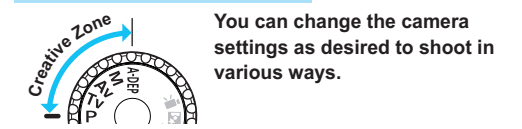 


You can change the camera settings as desired to shoot in various ways.

P: Program AE


The camera automatically sets the shutter speed and aperture in the same way as the <P> mode.

- Set the Mode Dial to <P>.

 
Tv: Shutter-priority AE

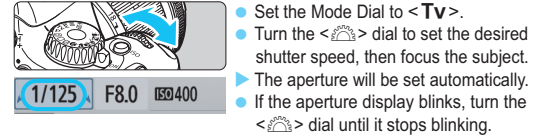

Av: Aperture-priority AE

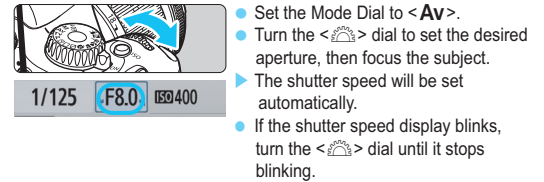 


AF: AF Mode

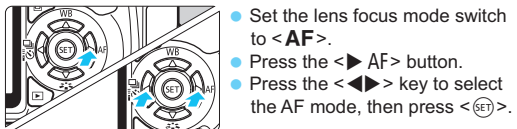 


- ONE SHOT (One-Shot AF):**
For still subjects
- AI FOCUS (AI Focus AF):**
Switches the AF mode automatically
- AI SERVO (AI Servo AF):**
For moving subjects

 
AF Point

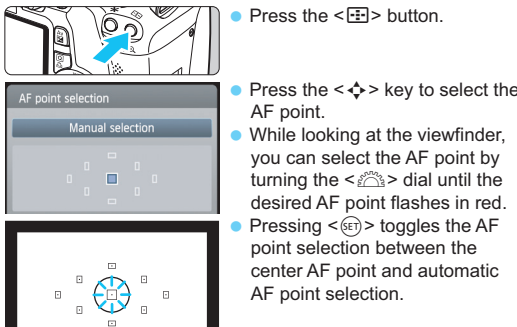


ISO: ISO Speed

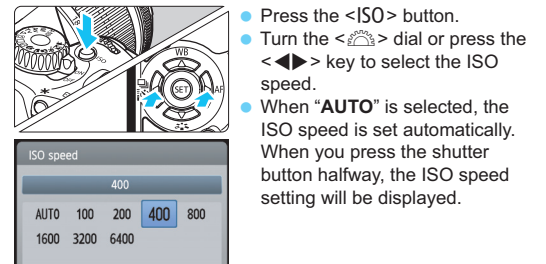 

Drive Mode

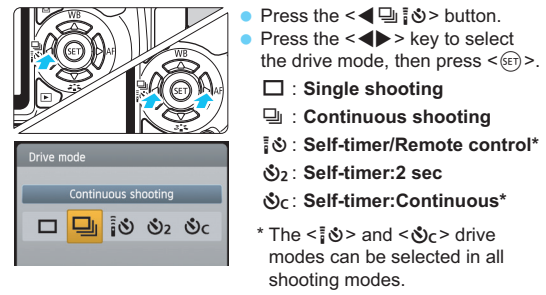 


Live View Shooting

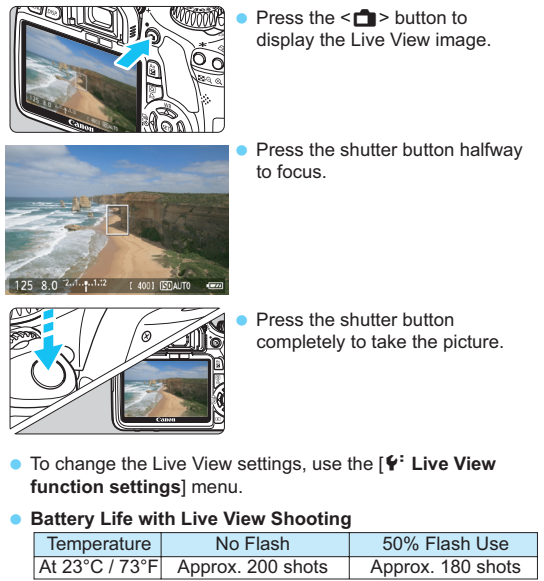 

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 200 shots	Approx. 180 shots

 Shooting Movies

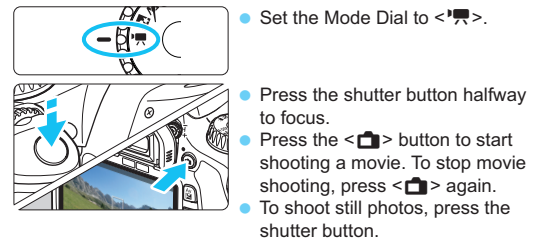

Custom Functions

1 Exposure level increments	7 AF-assist beam firing
2 ISO expansion	8 Mirror lockup
3 Flash sync. speed in Av mode	9 Shutter/AE lock button
4 Long exposure noise reduction	10 Assign SET button
5 High ISO speed noise reduction	11 LCD display when power ON
6 Highlight tone priority	12 Add image verification data